HUPEJOS®-V7

360° DASH CAM

THANK YOU FOR CHOOSING HUPEJOS®

After-Sales Services:hupejos@gmail.com

User Manual

CATALOG

What's in the Box? 2
Use reminder 3
Getting Started 6
Product Overview 7
Operation and Settings 9
Insert the memory card 12
Function display of dash cam display 14
(1)Playback settings 16
Specifications 20
Installation of the car dashcam 23
Parking Mode (Optional) 31
Mobile phone connection APP 35
(1)Download APP 35
(2)WiFi Connection 37
(3)APP Connection 39
(4)App Operation 40
After-sales Service Support 45

WHAT'S IN THE BOX ?

A. HUPEJOS®-V7 Dash Cam

B. Suction Cup Mount

C. Rear Camera

D. Car Charger with Built-in Type-C Cable(11.4ft)

E. Rear Camera Cable (18ft)

F. User Manual

G. Adhesive Sticker

H. 3M Spare Sticky Mount

I. Micro SD Card (SD card installed in card slot)

Use Reminder

1.Please read this instruction manual carefully before using the camera.It contains important information for your safety as well as operating and maintenance instructions.

2.Follow all safety precautions in order to prevent damage due to improperuse of the camera.

3. You should not install this dash camera at a place that would obstruct orreduce a driver's view. Make sure your usage complies with pertinentvehicle codes of your state, province, territory or country.

4.You should avoid extended exposure of the dash cam to direct sunlightor extreme temperatures (either high or low temperature) which tend todegrade or damage the unit and its normal functionality.

5.You should examine, check and verify the dash cam at least every 6 months, including the memory card, to ensure the video reception and recording are working properly. For each use, you should verify that the dash cam unit, the visible lights and the audible sounds are working normally.

6.Do not try to open the cover or try to repair it yourself. If the accessories for this device have any problem, please contact the seller for assistance.

7.Pay careful attention when cleaning the lens surface. Use a soft, moist cloth to clean the lens to avoid compromising video quality.

8.You should use the dash cam unit in the way it is intended. You should not use the dash cam unit in a way that would be illegal or that tends to physically damage the unit, or tend to cause danger to the safe operation of the vehicle or the occupants.

9.This device is intended to be used inside the vehicle only.

10.Do not exposethis productto rain, moisture orwater under any circumstances or it will result in external or internal damage.

11.Do not operate or install the camera while driving, or attemptto change any setting etc.

12.If any damage is caused by failure to followthe instructions, the warranty will be voided.

Getting Started

①Before installation, please check the accessories carefully to ensure that the product and accessories are correct and complete.

②In order to ensure that the device is running well, please format the micro SD card first before use.

③During installation, be sure not to insert the car key into the power supply, and donot insert or remove any machine accessories like microSD card or rear camera when the dash cam is powered on. These actions should be completed when power is turned off.

④When the car key is plugged into the vehicle, the dash cam will automatically turn on. Please check whether the function of power on/off, the cameras display is normal.

⑤If you need to download the recording videos and images, please turn off the camera first before removing the microSD card.

⑥You must use U3 high-speed card (recommended capacity 8GB-256GB),lower than U3 will cause problems like video stutter, black screen, and video cannot be recorded or cannot be played.

⑦For some mobile phone models, if find that the TsCam APP cannot be connected to the preview, please turn on the airplane mode of the mobile phone and try.

Product Overview

1.TYPE C power port

2.Rear camera head port

3.The up button

4.The menu button

5.The down button

6.The power button

7.TF card slot

8.Front camera

9.Inside Left Camera

10.Inside Right Camera

11.IR lamp

12.Display

13.Working indicator light

14.Bracket

Operation & Settings

Power button

- Recording mode: Short press for the switch screenfunction
- Setup mode: Short press to Select the previous function
- Playback mode: Short press to Select the previous file
  Short press again to return to the video mode

Up button

- Recording mode: Short press to open or stop recording video.
  Long press to open/ close the sound recording function
- Setup mode: Short press to Select the previous function
- Playback mode: Short press to Select the previous file

M button

- Recording mode: Short press Menu button for the emergency lock video
- Setup mode: Short press button to enter the menu
  Long press the Menu button to switch mode, switch to playback mode
- Playback mode: Short press to determine the function
  Long Press to return to the playback list interface when playing back the video or picture
  Long press to enter the display menu

Down button

- Recording mode: Press to switch the front, rear, and inside camera
  Long press to capture pictures
- Setup mode: press to scroll down
- Playback mode: Long press to return to picture mode

Work Indicator

Blue indicator light

1.Blue light is visible on the camera is plugged into the supply.

2.The indicator light blue light blinks on the Camera is recording.

Power On and Off

The camera will automatically turn on when the vehicle is started and turn off when thevehicle is turned off.

Short press the button once to turn on the camera, and then long press it again to turn off the camera.

When plugging in the car charger, the camera will automatically turn on and automatically start recording. When unplugging the car charger, it will automatically save the current video file and immediately shut down.

Insert the memory card

Push the TF memory card straight into the slot in the direc-tion of the screen print until you hear a "click" sound.
Remove the card: Push the TF memory card forward, and the card will be removed when it is ejected.
Note: Removing the TF card in the video state may reduce the file and damage the life of the TF card,pleaseturn off the dashcam first before inserting and removingthe TF card

SD card record files are described

SD Card name:Storage file

Event: Store video files that are locked in an emergency or manually

Normal: Store of conventional driving video files

Photo: Store snapshots

Parking: Store video files recorded by parking surveillance cameras

Share:For the reserved function, no files are stored

Secondary folder

A/B/C/D

A: Store video/pictures of front shots

B: Store video/pictures of left shots

C: Store video/pictures of right shots

D:Store the video/picture of the rear shot

V7 power tools

1.Cig Charger

Note: It is best to use the power cord that comes with our products, or our professional hardwire kit.

2.Hardwire Kit with radar

(Required for Parking Mode. Prevents car battery drain)(Not included, purchased separately)

Function display of dash cam display Main Interface

Video mode: short press the up button to stop the video, and then press the menu button to enter the main interface

Dash Cam: Driving recorder mode

Playback:Playback video or picture mode

Sound Record:Recording switch for Audio recording

Settings:System Settings

Number	Function description of the video recording interface
1	When you stop recording video, the time of recording will disappear automatically.
2	Resolution: Video resolution:4-way 1920×1080
3	Indicates that the sound recording function is enabled Indicates that the sound recording function is disabled.
4	WiFi function is not enabled. WiFi function is enabled. WiFi function is Connected.
5	SSID number and WiFi password
6	Current system time
7	The currently recorded video is protected with a lock of 20 seconds.
8	Front camera screen
9	Rear camera screen
10	The left camera screen showing inside the car
11	The right camera screen showing inside the car

Playback operations and settings

Button operation during playback

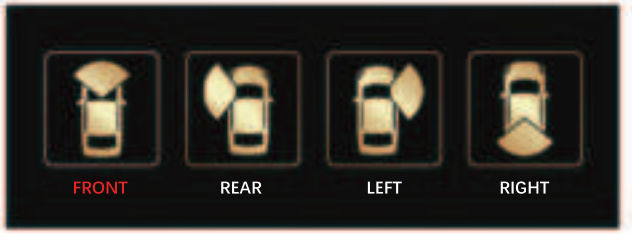

Playback file preview screen - icon status.

Video/picture switch key: Long press the down button to switch from video file preview to picture file preview

Menu: Long press the menu button to enter the menu mode

Previous page: Short press the up button to view the previous video/picture.

Next page: Short press the down button to view the next video/picture.

Long press the down button: To return to the video recording mode

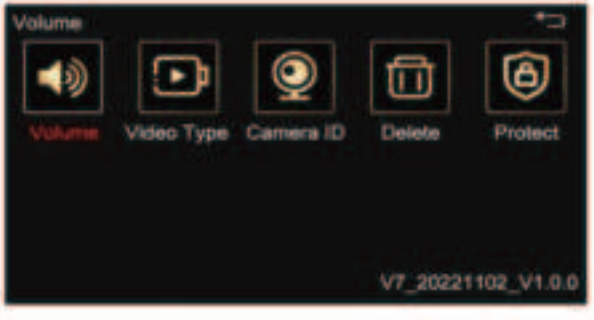

Volume:0~100 [Default value: 50]

Video type: Normal/Parking mode/Emergency

Camera: A/B/C/D

Delete: Delete one or all of them

Protect: Protects selected files/deprotects selected files/Protects all files/deprotects all files

Sound Record:

Press "M" button to turn on or off the Audio recording function

Indicates that the recording function is turned on when recording video

Indicates that the recording function is turned off when recording video

Settings:

Wi-Fi: ON(default)/OFF

1440P+1080P+1080P/1080Px4(Default)

IR Led: On/Off / Auto (Default)
Note: When the scene is dark, it automatically opens, and when the scene is bright,itcloses.

G-sensor: sensitivity setting, it works in parking monitoring mode, high/medium (default)low sensitivity / OFF

Parking:When parking, if there is a collision when opening, the DASH CAM willautomatically start recording for 30 seconds and then close it.High/medium/low sensitivity can be set

language:English(Default)/Espafa/Portugal/poccna/
简体中文/繁醴中文/Deutsch/Italia/Frangais/日本悟/
Korean/T urkiye/Thai/Nederland

Screen Saver:Off (default) You can set 1 minute to automatically close the screen and 3 minutes to automatically close the screen

Clock Settings:Set the date and time

Fomat card:Select whether to format the memory card (Format the memory card before using the dash cam)

Reset:Select whether to restore factory Settings

Specifications

NO.name	Description
1、Resolution:	Video resolution:4-way 1920×1080
2、Audio and video formats:	H.265 format

NO.name	Description
3、File format Image:	JPEG
4、Video:	mp4
5、Seamless Video:	Support
6、Power failure file recovery function:	Support
7、Year/month/day / hour:	Support
8、SD Card:	Supports up to 256G,Note:The SD card must be formatted on the machine before it can be used for the first time.
9、Multi-language support:	English /Español / Português / Russian/简体中文/繁體中文 /Deutsch/Italiano/ Français /日本語 /한국어/ Türkiye /Nederlands
10、WIFI APP:	Support
11、Standby current:	860mA
12、DDR:	DDR3 2G

NO.name	Description
13、Battery:	None
14、Lens:	6G F/NO 1.8
15、SENSOR:	2 megapixels
16、Lens angle:	150 degrees
17、Display specifications:	3.16-inch IPS
18、Display resolution:	mp4
19、G-SENSOR:	three-axis gravity sensor
20、Speaker specifications:	8R 1W
21、IR infrared fill light:	8pcs 940
22、Static current:	20uA